


IP510UHD-TZ

Quick Reference Guide

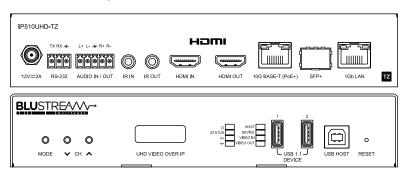

Introduction

The Blustream IP510UHD Transceiver is a SDVoE Compliant AV over IP solution that provides the highest-quality, uncompromised 4K with zero latency Audio/Video extension over copper or optical fibre 10G network. The IP510UHD-TZ includes support for HDMI 2.0 including distribution of HDR (High Dynamic Range), 10/12-bit colour content and multi-channel HD audio signals.

The IP510UHD-TZ provides advanced features including PoE+ and transmission of multiple control and data signals alongside audio and video, including IR, RS-232, USB (KVM) and 1Gb Ethernet. The IP510UHD-TZ is ideal for 18Gbps HDMI installations where multiple transceivers can be combined with one or more 10GbE copper / fibre switches to form a distributed video matrix, multi-viewer, or video wall system.

FEATURES:

- Advanced 18Gbps UHD Video over 10Gb network with visually lossless compression, and zero latency
- Supports HDMI 2.0 18Gbps specification with pass-through for up to 4K 60Hz 4:4:4 and 10/12-bit HDR sources, including Dolby Vision*
- Supports video scaling and seamless switching
- Supports all known HDMI audio formats including Dolby Atmos, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio transmission
- Features 4 operational modes:
 - Matrix distribution (requires 10Gb network switch)
 - Video Wall (requires 10Gb network switch)
 - Multiview mode (requires 10Gb network switch)
 - One-to-one HDMI extender (no network switch required)
- Supports fixed signal routing function for IR, RS-232, CEC and USB
- USB 1.1 end to end/point to point pass-through for KVM
- Analogue L/R audio embedding and audio breakout (balanced and unbalanced)
- Bi-directional 10/100/1000BaseT Ethernet pass-through
- Supports bi-directional 5V or 12V IR pass-through
- PoE (Power over Ethernet) to power Blustream products from PoE+ switch
- HDCP 2.2 compliant with advanced EDID management
- Local 12V 2A power supply (should Ethernet switch not support PoE+)


 *HDR and Dolby Vision content requires Genlock mode to be enabled (video scaler in passthrough mode)

Please note: The Blustream Multicast system distributes HDMI video over 10Gb managed network hardware. It is advised that Blustream Multicast products are connected on an independent network switch to prevent interference or drop in signal performance due to other network products. Please take care to make sure that you have read and understood the instructions in the User Manual available to download from the Blustream website, and that you have setup your network switch correctly prior to connecting any Blustream Multicast products. Failure to do so may result in problems with configuration of the system and video performance.




Panel Description - IP510UHD-TZ Transceiver

Front Panel

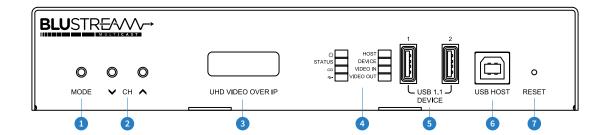

Rear Panel

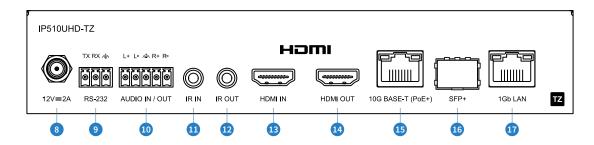

- 1 Mode Button Press and hold for 10 seconds to toggle between USB Host mode or USB Device mode.
- 2 Channel Up/Down Buttons in both TX and RX mode, press and hold up button for 3 seconds to enter sub menu, or press and hold both up and down buttons for 10 seconds to enter the local configuration mode.

 When in RX mode and not in a menu, the up and down arrows will cycle through the source TX selected
- 3 OLED Display Displays important information about the device, as well as configuration menus
- 4 Status LED's Power LED illuminates when device is powered
 - Status LED illuminates when device MCU is active
 - Link LED illuminates when the device has a link with another IP510UHD-TZ device
 - USB LED illuminates when USB device is connected
 - HOST LED illuminates when USB is in HOST mode
 - DEVICE LED illuminates when USB is in DEVICE mode
 - Video In LED illuminates when video source is being received
 - Video Out LED illuminates when video output device is connected
- 5 USB Devices Connect USB peripheral devices
- 6 USB Host Connect USB host PC
- Reset button Press and hold for 5 seconds to factory reset the product
- OC Power Use 12V 2A DC adaptor (sold separately) if not using a PoE+ network switch
- 9 RS-232 Port Connect to third party control device to extend RS-232 commands to any IP510UHD-TZ device
- L/R Analogue Audio Input/Output Balanced or unbalanced 2ch audio selectable input or output. **Please note:** source input must be PCM 2ch audio for analogue audio output to work
- IR Input 3.5mm stereo jack. Transmits IR to any IP510UHD-TZ currently viewing or being viewed. Use supplied Blustream 5V IR Receiver. When using the Blustream IRCAB cable (optional) ensure cable direction is correct
- 1R Output 3.5mm mono jack Routed IR from any IP510UHD-TZ allowing source or display control. Use supplied Blustream 5V IR emitter
- 13 HDMI Input Connect to a HDMI source
- 4 HDMI Output Connect to a HDMI display
- 10G BaseT Connection (PoE+) Connect to 10Gb Layer 3 Managed switch HDMI video distribution
- ⁽¹⁾ SFP+ connection Connect to 10Gb Layer 3 Managed switch SFP+ port for HDMI video distribution
- 1Gb LAN Connection Connect to network switch for Ethernet passthrough
- 02 ______ www.blustream.com.au | www.blustream-us.com | www.blustream.co.uk



IP510UHD-TZ Transmitter / Receiver Mode Configuration

All IP510UDH-Tz Transceivers are configured by default into both Transmitter and Receiver mode. Pressing and holding the MODE button on the front panel of the unit for 5 seconds will toggle between USB Host and Device mode. The OLED display will then show the product has switched to USB Host/Device mode. The mode can also be configured via the ACM500. Please see the ACM500 User Manual, downloadable from the Blustream website, for more information on how to complete this.

The IP510UHD-TZ OLED display will show different information, or menu system, depending on what mode is selected. The display will turn off after 30 seconds of inactivity. The table below outlines all of the configuration settings:

• TX: IP 169.254.3.1 • TX: ID 001 2nd line scrolls through the TX information being viewed: TX Name, TX ID, and TX IP every 5 seconds, eg: • Tx: Transmitter 001 • TX: ID 001 • TX: IP 169.254 Press and hold UP and DOWN buttons for 5 seconds to enter the Local Config menu Local Config: • Transmitter ID This will set the Transmitter ID as well as its related IP addresses eg: if ID is set to 004, new IP and SSIP addresses will be 169.254.3.4 and 169.254.103.4 respectively. Press and hold UP and DOWN buttons for 5 seconds to confirm the new ID Press and hold UP button for 5 seconds to config sub menu TX Sub Menu Config: • Audio • F/W Info • SFP Info • IP Info • EDID Use Up and DOWN buttons to highlight the item to be selected Press and hold UP and DOWN buttons for 5 seconds to enter the sub menu F/W Info: • SDVOE: 1.2.0.2 • GUI: 1.10.04 • MCU: 1.10.20 • Back SFP Info: • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • I69.254.3.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.3.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1	The display will turn off after 30 seconds of inactivity. The table below outlines all of the configuration settings:						
Ist line shows TX name (does not scroll), eg: - TX: Transmitter 001 - TX: ID 001 -	Transmitter / Er	Receiver / Decoder Mode					
Press and hold UP and DOWN buttons for 5 seconds to enter the Local Config menu Local Config: • Transmitter ID This will set the Transmitter ID as well as its related IP addresses eg: if ID is set to 004, new IP and SSIP addresses will be 169.254.3.4 and 169.254.103.4 respectively. Press and hold UP and DOWN buttons for 5 seconds to confirm the new ID Press and hold UP button for 5 seconds to enter the TX or RX Config sub menu TX Sub Menu Config: • Audio • F/W Info • SFP Info • IP Info • EDID Use Up and DOWN buttons to highlight the item to be selected Press and hold UP and DOWN buttons for 5 seconds to enter the sub menu F/W Info: • SDVoE: 1.2.0.2 • GUI: 1.10.04 • SPV Info • MCU: 1.10.20 • Back SFP Info: • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1	line shows TX name (does not the Transmitter 001 I line scrolls through TX IP and	TX ID every 5 seconds, eg:	1st line scrolls thro seconds, eg: • RX: Receiver 001 2nd line scrolls thro Name, TX ID, and T	• RX: IE ough the TX inf TX IP every 5 se	0 001 • R formation beir conds, eg:	XX: IP 169.254.6.1 ng viewed: TX	
Local Config: • Transmitter ID This will set the Transmitter ID as well as its related IP addresses eg: if ID is set to 004, new IP and SSIP addresses will be 169.254.3.4 and 169.254.103.4 respectively. Press and hold UP and DOWN buttons for 5 seconds to confirm the new ID Press and hold UP button for 5 seconds to enter the TX or RX Config sub menu TX Sub Menu Config: • Audio • F/W Info • EDID Use Up and DOWN buttons to highlight the item to be selected Press and hold UP and DOWN buttons for 5 seconds to enter the sub menu F/W Info: • SDVoE: 1.2.0.2 • GUI: 1.10.04 • MCU: 1.10.20 • Back F/W Info: • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1 • Saler: FIND: Cocal Config: • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Ins will set the Receiver ID • Receiver ID • Receiver ID • Receiver ID • Roud 169.254.106.3 respectively. • Scaler • F/W Info • Receiver ID • Receiver ID • Roud 169.254.106.3 respectively. • Scaler • F/W Info • Receiver ID • Roud 169.254.106.3 respectively. • Scaler • F/W Info • Receiver ID • Roud 169.254.106.3 respectively. • Scaler • F/W Info • New Config • New Config • New Config							
Press and hold UP button for 5 seconds to enter the TX or RX Config sub menu TX Sub Menu Config:	cal Config: ansmitter ID s will set the Transmitter ID as v if ID is set to 004, new IP and S. 0.254.3.4 and 169.254.103.4 resp	Local Config: • Receiver ID This will set the Receiver ID as well as its related IP addresses eg: if ID is set to 003, new IP and SSIP addresses will be 169.254.6.3 and 169.254.106.3 respectively.					
TX Sub Menu Config:	Press and hold UP and DOWN buttons for 5 seconds to confirm the new ID						
• Audio • F/W Info • EDID • SFP Info • IP Info • Viewing Mode • Max Channel Use Up and DOWN buttons to highlight the item to be selected Press and hold UP and DOWN buttons for 5 seconds to enter the sub menu F/W Info: • SDVoE: 1.2.0.2 • MCU: 1.10.20 • Back SFP Info: • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1 • Back EDID: Scaler • F/W Info • Viewing Mode • Max Channel • Mac in the sub menu F/W Info: • SDVoE: 1.2.0.2 • GUI: 1.10.04 • Back • Back SFP Info: • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1 • Back EDID: Scaler	Press and hold UP button for 5 seconds to enter the TX or RX Config sub menu						
Press and hold UP and DOWN buttons for 5 seconds to enter the sub menu F/W Info: SDVOE: 1.2.0.2 GUI: 1.10.04 SDVOE: 1.2.0.2 GUI: 1.10.04 • MCU: 1.10.20 • Back MCU: 1.10.20 • Back SFP Info: • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • MAC: 6CDFFB000203 • Gateway: 169.254.100.1 • Back IP Info: IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1 • IP: 169.254.3.1 • Back • Back • Back EDID: Scaler:	ıdio • F/W Info	• SFP Info	• Scaler •	F/W Info			
• SDVoE: 1.2.0.2 • MCU: 1.10.20 • Back SFP Info: • MAC: 6CDFFB000203 • Sack IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • Gateway: 169.254.100.1 • Back IP Info: • MAC: 6CDFFB000202 • Gateway: 169.254.100.1 • Subnet: 255.255.0.0 • IP: 169.254.3.1 • Back EDID: SCALER:							
 MAC: 6CDFFB000203 Subnet: 255.255.0.0 Back IP Info: MAC: 6CDFFB000203 Subnet: 255.255.0.0 Back IP Info: MAC: 6CDFFB000203 Back Back IP Info: MAC: 6CDFFB000203 MAC: 6CDFFB000203 MAC: 6CDFFB000203 MAC: 6CDFFB000202 MAC: 6CDFFB000202 MAC: 6CDFFB000202 MAC: 6CDFFB000203 MAC: 6	OVoE: 1.2.0.2 • GUI: 1		• SDVoE: 1.2.0.2				
 MAC: 6CDFFB000202 Subnet: 255.255.0.0 Back MAC: 6CDFFB000202 Gateway: 169.254.100.1 Subnet: 255.255.0.0 Back Back Scaler: 	AC: 6CDFFB000203 • Gates subnet: 255.255.0.0 • 169.2		MAC: 6CDFFB0002Subnet: 255.255.0			100.1	
	AC: 6CDFFB000202 • Gatev ubnet: 255.255.0.0 • IP: 16		MAC: 6CDFFB0002Subnet: 255.255.0			100.1	
• 02: 1080p 7.1ch • 03: 1080i 2ch • 02: 720x480@60 16:9 • 03: 720x576@50 4:3 • 04: 1080i 5.1ch • 05: 1080i 7.1ch • 04: 720x576@50 16:9 • 05: 1280x720@24 • 06: 1080p 3D 2ch • 07: 1080p 3D 5.1ch • 06: 1280x720@25 • 07: 1280x720@30 • 08: 1080p 3D 7.1ch • 09: 4k30 444 2ch • 08: 1280x720@50 • 09: 1280x720@60 • 10: 4k30 444 5.1ch • 11: 4k30 447 7.1ch • 10: 1920x1080@24 • 11: 1920x1080@25 • 12: 4k60 420 2ch • 13: 4k30 420.1ch • 12: 1920x1080@30 • 13: 1920x1080@50 • 14: 4k30 420 7.1ch • 15: 4k60 444 2ch • 14: 1920x1080@60 • 15: 3840x2160@24 • 16: 4k60 444 5.1ch • 17: 4k60 444 7.1ch • 16: 3840x2160@25 • 17: 3840x2160@30 • 18: 4k60 444 7.1ch HDR • 19: 4k60 444 5.1ch HDR • 18: 3840x2160@25 • 19: 3840x2160@60 • 20: 4096x2160@30 • 22: 4096x2160@30 • 23: 4096x2160@50 • 23: 4096x2160@50 • 22: 4096x2160@60 • 24: 4096x2160@60 • 23: 4096x2160@50	0: 1080p 2ch • 01: 10 0: 1080p 7.1ch • 03: 10 0: 1080p 3D 1ch • 05: 10 0: 1080p 3D 2ch • 07: 10 0: 1080p 3D 7.1ch • 09: 44 0: 4k30 444 5.1ch • 11: 4k 0: 4k30 420 2ch • 13: 4k 0: 4k60 444 5.1ch • 15: 4k 0: 4k60 444 2ch HDR • 19: 4k 0: 4k60 444 7.1ch HDR • Back	.080i 2ch .080i 7.1ch .080p 3D 5.1ch !k30 444 2ch !k30 444 7.1ch !k30 420.1ch !k60 444 2ch !k60 444 7.1ch	• 00: Passthrough • 02: 720x480@60 1 • 04: 720x576@50 1 • 06: 1280x720@25 • 08: 1280x720@50 • 10: 1920x1080@2 • 12: 1920x1080@3 • 14: 1920x1080@6 • 16: 3840x2160@2 • 18: 3840x2160@5 • 20: 4096x2160@3 • 22: 4096x2160@6	.6:9	• 05: 1280x720@24 • 07: 1280x720@30 • 09: 1280x720@60 • 11: 1920x1080@25 • 13: 1920x1080@50 • 15: 3840x2160@24 • 17: 3840x2160@30 • 19: 3840x2160@60 • 21: 4096x2160@25 • 23: 4096x2160@50		
 Audio: Auto Audio Analogue Audio. Max Channel: MAX TX: 000 - x (where x is the max channels that an Rx can scroll through, and 000 is the ablity to view all channels/TX's Back 	ıto Audio • HDMI		• MAX TX: 000 - x (w scroll through, and				
Viewing Mode • 'MATRIX' or 'VIDEOWALL' or 'MULTIVIEW' • Back			• 'MATRIX' or 'VIDEO	DWALL' or 'MUI	_TIVIEW'		

Settings menu will time out and return to main display after 20 seconds of inactivity

Specifications

IP510UHD-TZ

- Video input: 1 x HDMI Type A, female
- Video output: 1 x HDMI Type A, female
- Audio input / output: 1 x 5-pin Phoenix connector
- Ethernet port: 1 x 10GBaseT RJ45 Video network, 1 x SFP+ module video network, 1 x 1Gb LAN RJ45 pass-through
- RS-232 serial port: 1 x 3-pin Phoenix connector
- USB/KVM Port: 1 x USB-Type B (host), 2 x USB-Type A (device)
- IR input: 1 x 3.5mm stereo jack
- IR output: 1 x 3.5mm mono jack
- Dimensions (W x D x H): 195mm x 153mm x 37mm
- Dimensions including connections (W x D x H): 195mm x 160mm x 37mm, without feet
- Shipping weight (Kit): 1.05kg
- Operating temperature: 32°F to 104°F (0°C to 40°C)
- Storage temperature: -4°F to 140°F (-20°C to 60°C)
- Operating altitude: < 2,000m

Package Contents

IP510UHD-TZ

- 1 x IP510UHD-TZ Transceiver
- 1 x IR Receiver
- 1 x IR Emitter
- 4 x Rubber Feet
- 1 x Mounting Kit
- 1 x Quick Reference Guide

Certifications

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- \bullet Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION - changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADA, INDUSTRY CANADA (IC) NOTICES

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

